


## How to change the oven and safety thermostats on Nostalgie Series.

### Phase 1: Inside the oven – Oven Thermostat

1. Remove oven door – The hinges fold up and the door pulls up and off the hinge.



4. You will then see (2) of the thermostats that sit in (3) clips.

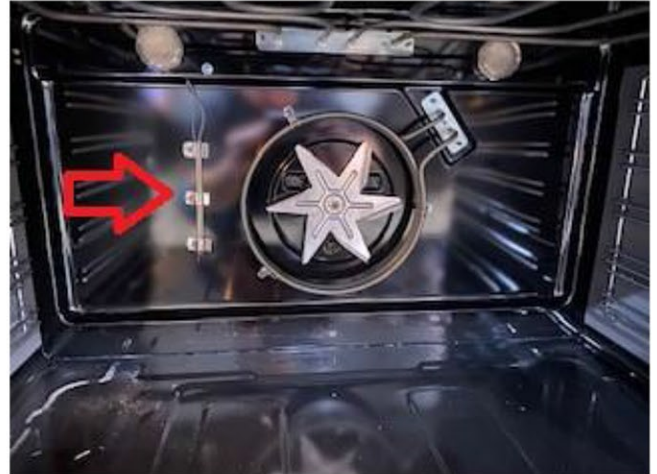

2. Take out oven racks.



5. Locate the other (2) thermostats at the top of the oven, above the heating element.
6. Remove the metal cover – remove the (2) screws that hold it in place.



3. Remove back panel that covers convection fan – Remove (3) screws on the back panel.

## Phase 2: Cooktop – Safety Thermostat

1. Remove grates and burners.
2. Remove thermocouples – remove screws and nuts holding them into place.



3. Remove the burner pans – take out the screws in each of the (4) corners.



4. Locate the oven thermostat – It is underneath the burner pans, in the back left corner. It has (2) wires with connectors and is held down with (1) sheet metal screw.



5. Locate and remove oven control knob.
6. Remove the (2) screws behind that knob.



**BEFORE REMOVING:** Both Oven and Safety thermostats have (2) thermostats that criss-cross and route to different openings inside the oven. Before replacing the old thermostats with new, be sure to mark which routes to where to ensure proper wiring.



After replacing the thermostats and verifying correct connections, reverse the steps above to reassemble the cooker. Test each burner and oven to verify proper function.